

Corporate Servers

College of Science, Engineering, and Technology, Grand Canyon University


ITT-216: Enterprise Route & Switch

Instructor Tim Collins


Liela Pressley

4/30/2023


1. Added a DNS and WWW Server

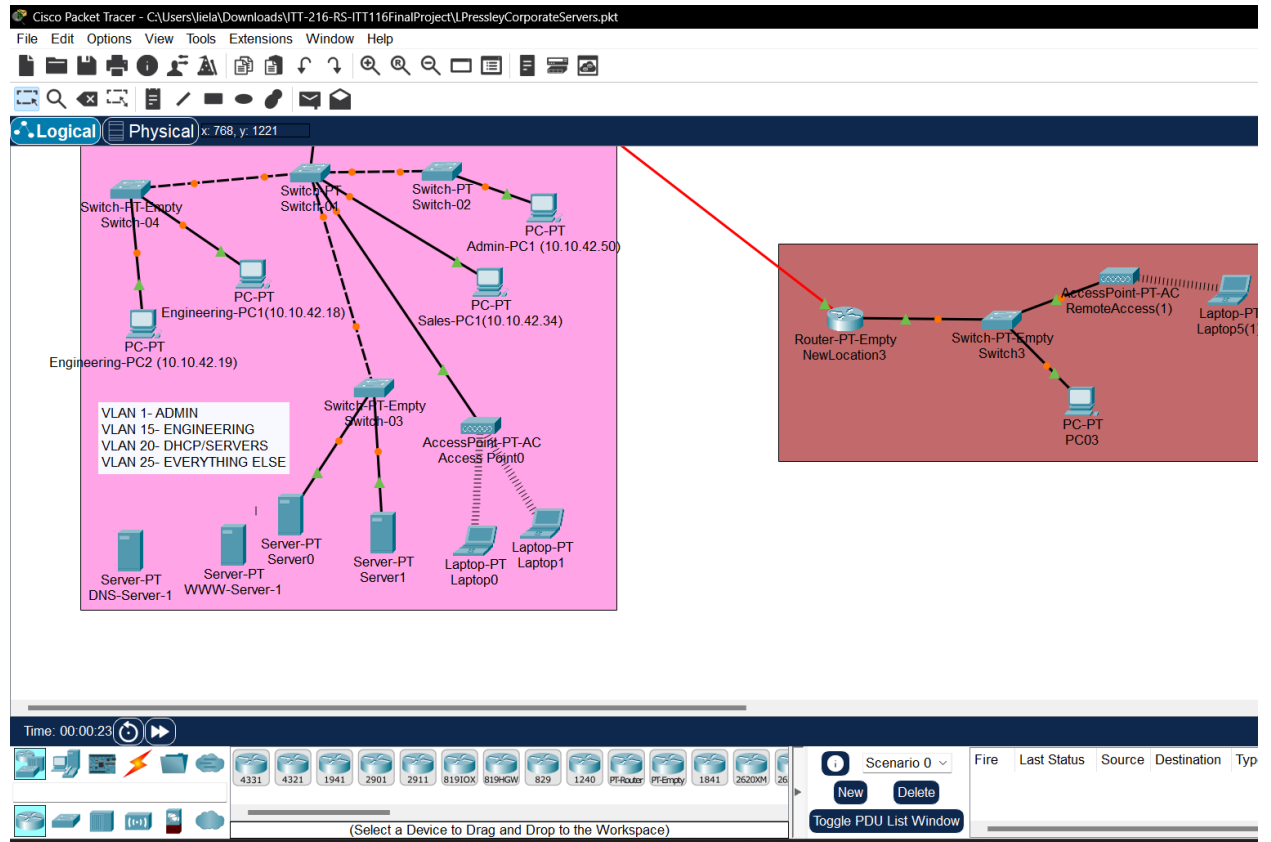


2. Configured the default gateway to 10.10.42.81 and static IP to 10.10.42.86

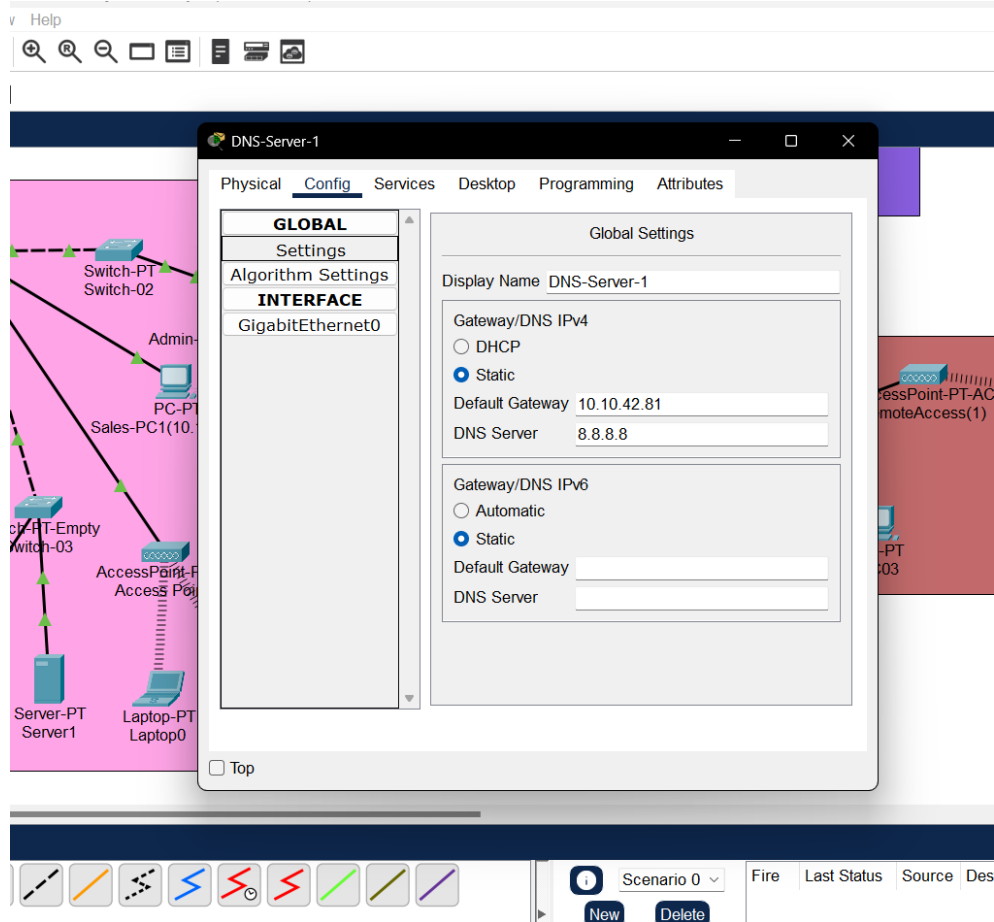


3. Inputting DNS records dhcpserver1-wwwserver1

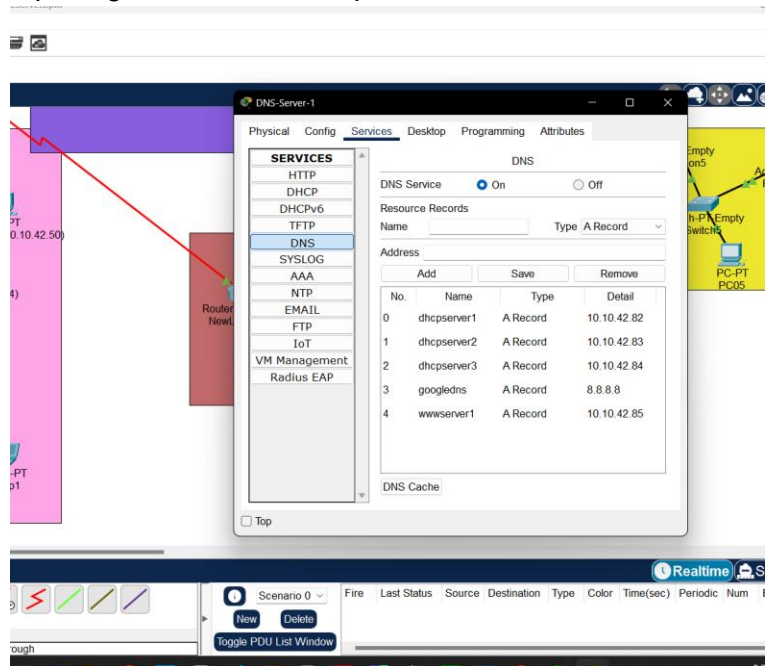

4. Configured WWW server's gateway and connecting to DNS server etc.

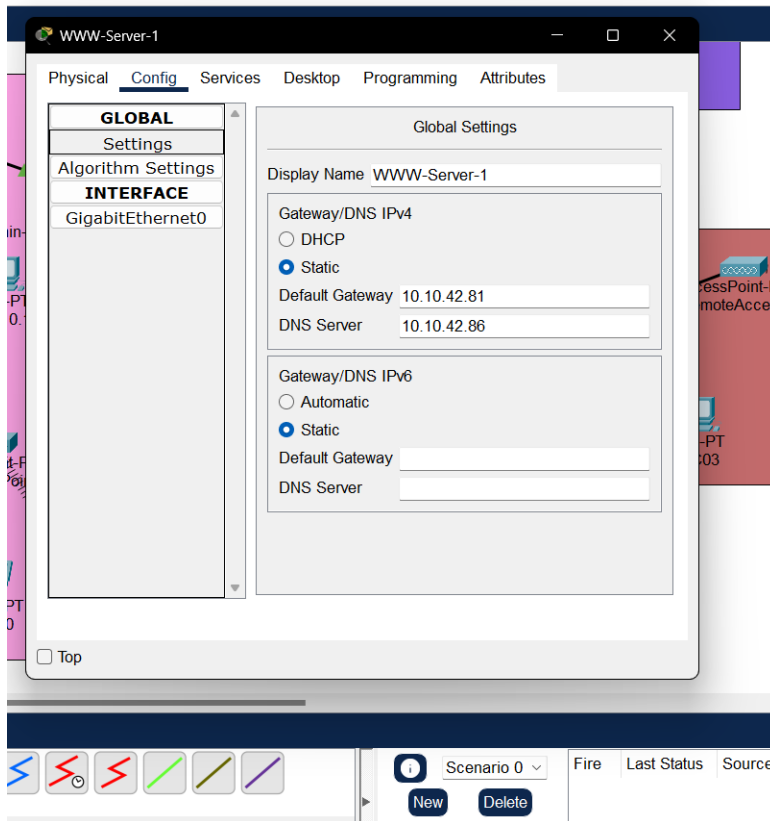

5. Successfully ping the DNS server and the WWW server

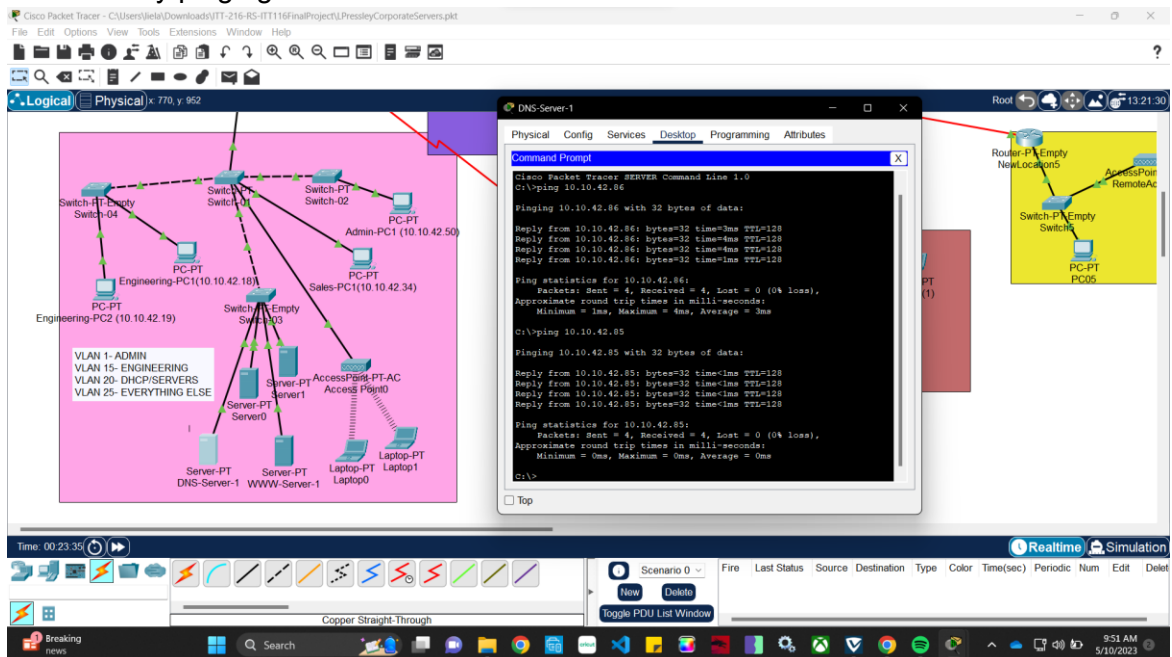

6. Configure the DHCP service on the server to connect to the DNS server updated ip address

Physical Config Services Desktop Programming Attributes

SERVICES

- HTTP
- DHCP**
- DHCPv6
- TFTP
- DNS
- SYSLOG
- AAA
- NTP
- EMAIL
- FTP
- IoT
- VM Management
- Radius EAP

DHCP

Interface: GigabitEthernet0 Service: ☒ On ☐ Off

Pool Name: serverPool

Default Gateway: 0.0.0.0

DNS Server: 10.10.42.86

Start IP Address: 10 10 42 80

Subnet Mask: 255 255 255 240

Maximum Number of Users: 16

TFTP Server: 0.0.0.0

WLC Address: 0.0.0.0

Pool Name	Default Gateway	DNS Server	Start IP Address	Subnet Mask	Max User	TFTP Server	WLC Address
serverPool	0.0.0.0	10.10.42.86	10.10.42.80	255.255.255.240	16	0.0.0.0	0.0.0.0

7. Configure DHCP service on server1 to connect to DNS server to update IP address

Physical Config Services Desktop Programming Attributes

SERVICES

- HTTP
- DHCP**
- DHCPv6
- TFTP
- DNS
- SYSLOG
- AAA
- NTP
- EMAIL
- FTP
- IoT
- VM Management
- Radius EAP

DHCP

Interface: GigabitEthernet0 Service: ☒ On ☐ Off

Pool Name: serverPool

Default Gateway: 0.0.0.0

DNS Server: 10.10.42.86

Start IP Address: 10 10 42 80

Subnet Mask: 255 255 255 240

Maximum Number of Users: 16

TFTP Server: 0.0.0.0

WLC Address: 0.0.0.0

Pool Name	Default Gateway	DNS Server	Start IP Address	Subnet Mask	Max User	TFTP Server	WLC Address
serverPool	0.0.0.0	10.10.42.86	10.10.42.80	255.255.255.240	16	0.0.0.0	0.0.0.0
mfg	10.10.42.97	10.10.42.86	10.10.42.98	255.255.255.240	13	10.10.42.82	0.0.0.0
mfgWireless	10.10.42.113	10.10.42.86	10.10.42.114	255.255.255.240	13	10.10.42.82	0.0.0.0
shipping	10.10.42.129	10.10.42.86	10.10.42.130	255.255.255.240	13	10.10.42.82	0.0.0.0
shippingWireless	10.10.42.145	10.10.42.86	10.10.42.146	255.255.255.240	13	10.10.42.82	0.0.0.0

8. Checked to see if the PC on the network can recongize/successfully see the newly configured/added DNS server

